


INSTALLATION FACTS

Once the fence alignment and grades have been set, the post footing holes are dug with an auger at 13'-2" on center and filled with concrete up to grade height. The post bases are cast with two sticks of #4 rebar extending three feet over the top of the footing.

After the post footings have set up, the first post is lowered over the rebar onto the base. The panel is installed and then another post, repeating the sequence.

Next, the post is filled with grout to cover the rebar and a cap is set in place with masonry cement.

Options:
All of the posts can be placed prior to setting the panels, be sure of the spacing between each post - visit www.verti-cretennw.com for additional details.

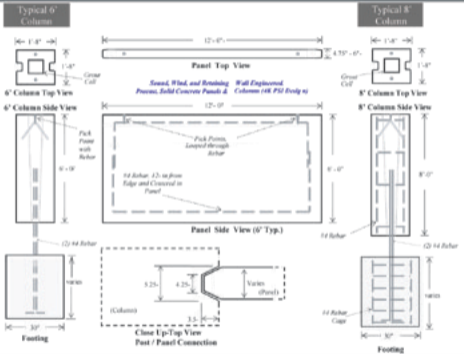

MONUMENTS

Monuments can be made to custom specifications and designs.

